


## Hardware Overview / Présentation du matériel /

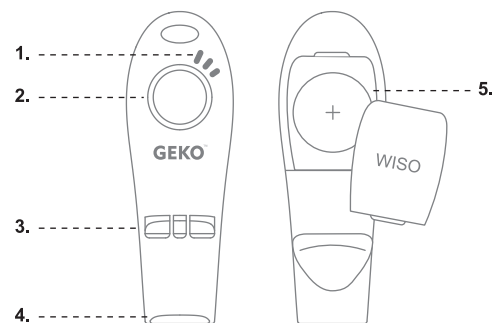

### 1.LED Notifications

- Blue (blinks every 60 seconds): WISO is connected to smartphone.
- Red (blinks twice every 7 seconds): WISO is disconnected from smartphone
- Red (Steady, 10 seconds): Emergency notifications have been activated by whistle or button
- Red (blinks once every 10 seconds): Battery low

### 2. Emergency Button

### 3. Air Hole

### 4. Mouthpiece

### 5. Battery Lid

### 1.LED Notifications

- Bleu ( clignote toutes les 60 secondes ) : WISO est connecté au smartphone
- Rouge ( clignote deux fois toutes les 7 secondes ) : WISO est déconnecté du téléphone intelligent
- Rouge ( Steady , 10 secondes ) : notifications d'urgence ont été activés par sifflet ou bouton
- Rouge ( clignote une fois toutes les 10 secondes ) : Batterie faible


### 2. Bouton d'urgence

### 3. Air Trou

### 4. Mouthpiece

### 5. Battery Couverture

## Carry Smart Whistle with you / Carry intelligente Whistle avec vous /

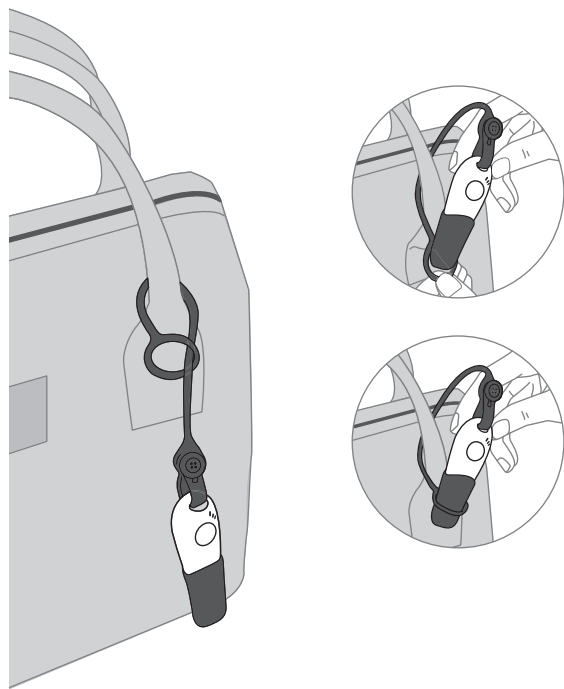

Use the cover to protect the WISO mouthpiece and attach the smart whistle to your key chains, bags or your carry on items.

Utilisez le couvercle pour protéger l'embouchure de WISO et joindre le coup de sifflet intelligent pour votre porte-clés, sacs ou votre bagage à main.

## Please Note /

- WISO app must be installed on smartphone and connected to GEKO Smart Whistle in order to activate emergency notifications.
- WISO uses Bluetooth 4.0 technology (Range=5-6 meters)
- You must have internet connection to make Emergency Notification work.
- You must enable location services to have the location be sent via Emergency Notification.
- To install the WISO APP on your AndroidTM/iOS device, make sure that the software version of your AndroidTM 4.4 or later / iOS 7 or later and that your AndroidTM / iOS device supports the Bluetooth4.0 low energy standard.
- SMS emergency notifications are disabled when roaming internationally.
- DO NOT close the WISO APP on your smartphone, otherwise emergency notifications will not be activated.
- You must re-launch the app after you turn off or restart your smartphone.
- Emergency phone call is only available for Android device. It is not available on iOS devices due to its native restriction.
- The WISO location service will ONLY be displayed on Google Map.
- You should use the smart whistle unit in the way it is intended. You should not use the smart whistle unit in a way that would be illegal.
- The smart whistle unit may have additional functionality, such as transmission and recordation of audible or GPS signal or other identification information. If you have privacy concerns about these functions, make sure you follow the instruction to disable these functions.

## Notez s'il vous plaît /

- WISO application doit être installée sur smartphone et connecté à GEKO intelligente Whistle afin d'activer les notifications d'urgence.
- WISO utilise la technologie Bluetooth 4.0 ( Plage = 5-6 mètres )
- Vous devez avoir une connexion Internet pour rendre le travail de notification d'urgence.
- Vous devez activer les services de localisation d'avoir l'emplacement sera envoyé par notification d'urgence.
- Pour installer le WISO APP sur votre appareil AndroidTM / iOS, assurez-vous que la version du logiciel de votre AndroidTM 4.4 ou ultérieure / iOS 7 ou version ultérieure et que votre appareil AndroidTM / iOS prend en charge la norme basse énergie Bluetooth4.0.
- SMS notifications d'urgence sont désactivés en cas d'itinérance internationale.
- NE PAS fermer le WISO APP sur votre smartphone, sinon les notifications d'urgence ne seront pas activées.
- Vous devez relancer l'application après que vous éteignez ou redémarrez votre smartphone.
- Appel téléphonique d'urgence est disponible uniquement pour les appareils Android . Il est disponible sur les appareils iOS en raison de sa restriction native.
- Le service de localisation WISO sera SEULEMENT affiché sur Google Map.
- Vous devez utiliser l'unité de sifflet intelligent dans la façon dont elle est destinée. Vous ne devriez pas utiliser l'unité de sifflet intelligente d'une manière qui serait illégale .
- L'unité de sifflet intelligent peut avoir des fonctionnalités supplémentaires , telles que la transmission et l'inscription d' un signal sonore ou GPS ou d'autres informations d'identification . Si vous avez des problèmes de confidentialité sur ces fonctions , assurez-vous que vous suivez les instructions pour désactiver ces fonctions .



## GEKO Smart Whistle Quick Guide

## GEKO intelligente Whistle Guide rapide

